



KFU

جامعة الملك فيصل

KING FAISAL UNIVERSITY

جامعة ووطن.. نماء.. واستدامة..



INSTRUMENT STANDARD OPERATING PROCEDURE MANUAL

College of Medicine



SAFETY AND LABORATORY COOMMITTEE, C.O.M, K.F.U.

Prepared by

Document Number	Name	Signature	Date
CM/HIS-016	MR. MOHAMMED AL HEJAB MR. ALI AL THANI		23/11/2020
Revision Number	Approved by		
R0	Dean: Department: Histopathology		

Document History

Document Section	Details of Amendments	Date	Modified by (Initials)
SOP	First Draft on SOP for the operation of Analytical and Precision Balance- HR -200 A&D	23/11/2020	

1. OBJECTIVE

- ☐ The document describes the operation of the Analytical and Precision Balance.
- ☐ Offer precision weighing capacities from 0.001-210 grams.
- ☐ Versatile features allow to weighing in percentage in proportionate to a reference weight.

2. SCOPE

-

3. RESPONSIBILITIES

- ☐ It is the responsibility of designated personnel in Research lab to train staff and students on this procedure and to ensure adherence to this procedure under supervision.
- ☐ It is the responsibility of designated personnel (staff or Student) to follow the instructions of this procedure under supervision.
- ☐ Routine in R & D laboratories of the pharmaceutical and biotechnical industry.

4. REFERENCES

- HR -200 A&D. Analytical and Precision Balances operating instructions manual.

5. DEFINITIONS

- ☐ Cover pan.
- ☐ Pan support
- ☐ Weighing pan Floor pan
- ☐ Max weighing capacity 200g, readability 0.1 mg, linearity ± 0.2 mg,
- ☐ Weighing pan dimension 76mm
- ☐ Draft Shield disk.
- ☐ Leveling bubble.
- ☐ Leveling foot.
- ☐ AC adapter connection.
- ☐ RS-232C interface
- ☐ 2 Anti - theft locking device attaching lug.
- ☐ Control display (power on/off, print/menu key \arrow key and zero key.).

6. SAFETY PRECAUTIONS

- ☐ Be sure that the voltage rating printed on the AC adapter is identical to the local voltage.
- ☐ Do not use the balance in a hazardous location
- ☐ Turn off the power completely by disconnecting the AC adapter from the balance.
- ☐ Do not contact the AC adapter with liquid.
- ☐ Do not open the balance housing (No user serviceable parts).
- ☐ Never Lift balance and transport the balance by the draft it cause damage to internal mechanisms (only from its base).

7. PROCEDURE FOR OPERATING Analytical and Precision Balance- HR -200 A&D

7.1. Turning on the instrument:

- ☐ Switch on the instrument (mains switch on)
- ☐ Allow the balance to warm up. To room temperature (minimum of 30 minutes).

7.2. Software Operation.

7.3. Steps of the Procedure

- ☐ Place a container on the weighing pan (to register the weight of the container).
- ☐ Press the Zero key.
- ☐ Control Display shows (zeroed the balance).
- ☐ Balance read out 0.0000 grams after successful taring.
- ☐ When the readout is stable the balance display the unit of measurement using abbreviations:
g :grams , GN:grains ,OZ :ounces , ozt:Troy ounces,
ct:carats, tl:taels ,dwt:pennyweights:
,ib:pounds,pcs:pieces.
- ☐ Automatic external Adjustment and calibrate the balance
when there is no weight, the balance is tared and
the internal signal is stable.

7.4. Turning off the Instrument

- ☐ Unload the containers .
- ☐ Turn off the electric main power source.
- ☐ Turn off the power completely by disconnecting the AC adapter from the balance.

